


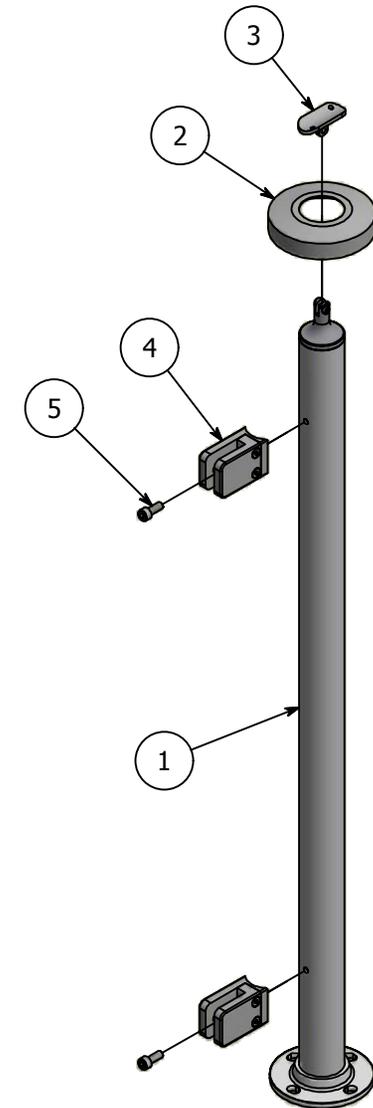

Legato Assembly Guide Round Post - Surface Mount - Glass Clips - Mid & End Post

- 1. Plumbing Legato Post.** Before completing attachment of Legato post/posts to substrate - take all necessary steps to assure that the mounted post/posts are adjusted such that the post/posts are plumb to 1/16" at an extended height of 42". Spend the time required to plumb the post/posts to this tolerance to ensure correct alignment of all components. (Anchor bolts are not included)
- 2. Install Decorative Flange Cover.** Slide decorative flange cover (2) over post (1) and locate securely over flange base.
- 3. Install Saddle Bracket.** Install saddle bracket (3) to top of post (1) using Allen head screw provided.
- 4. Install Glass Clips.** Disassemble glass clips (4) by removing two Allen head clamping screws. Take "L" shape part of glass clip and using Allen head cap screw (5) secure "L" shape glass clip to post (1) using pre-tapped holes. Repeat process for all clips.
- 5. Install Hand Rail.** Place handrail on top of saddle bracket/brackets (3) and temporarily secure in place. Using pre-drilled holes in saddle bracket (3) mark handrail. Drill handrail (#25 drill bit or 0.1495 diameter hole) and secure to saddle bracket (3) using a #10 sheet metal screw (Not included)
- 6. Install Glass Infill Panel.** Select correct gasket from 3 sets provided with glass clips to suit glass thickness being using. (1/2", 9/16", 5/8"). Locate selected gasket into both sides of the glass clip. Install security pin provided with glass clip into location hole in installed half of glass clip. Have someone hold the glass panel in place between the glass clips while the remaining pressure plate halves of the glass clips are installed using the two countersunk head screws provided with each clip. Ensure infill panel is level.



WAGNER ARCHITECTURAL GLASS SYSTEMS
(888) 243-6914 • (414) 716-8403 • FAX (414) 214-0450
ags@mailwagner.com